

HORN RELAY INSTALL FOR STANDARD FR COLUMN

YELLOW WIRE- POWER IN FROM VEHICLE

RED WIRE - POWER OUT TO HORN

BLUE WIRE- JUMP TO YELLOW WIRE

BROWN - TO BLACK WIRED FROM COLUMN

BLACK WIRE ON RELAY NOT USED